




## INSTALLATION INSTRUCTIONS

### 5PSP SOFT-CLOSE BLIND CORNER ORGANIZER

#### TOOLS REQUIRED:

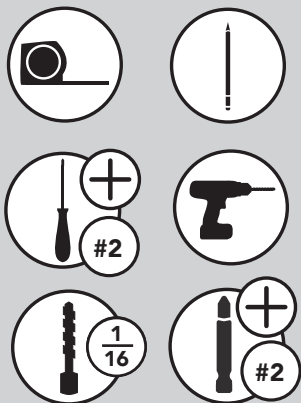

#### ESTIMATED ASSEMBLY TIME:

**45 MIN**

#### CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.

#### INSTALLATION OPTIONS

5PSPSC-15 (15" Opening) page 2  
left handed door

5PSPSC-15 (15" Opening) page 5  
right handed door












#### PANEL PARTS LIST:

	Description	QTY
A	Base	1
B	Frame	1
C	Feet	1 Set
D	Guide Channel	1
E	Baskets	4



#### FITTING PARTS LIST:

	Description	QTY
1	Handles	2
2	M4x10 mm flat-headed screws	2
3	M6x10 mm wafer head screw	8
4	M5x6 mm flat head screws	8
5	4G x18 mm pan head screws	19
6	M4 x 4.5 mm pan head screws	2

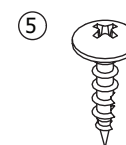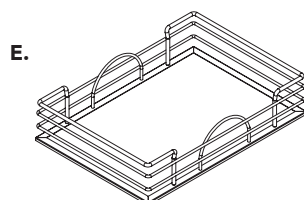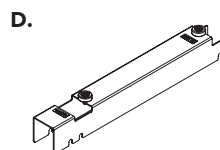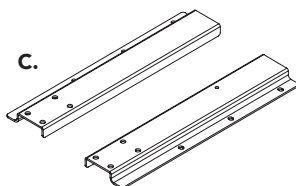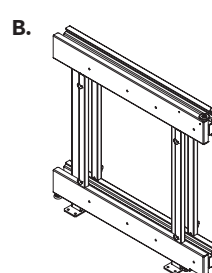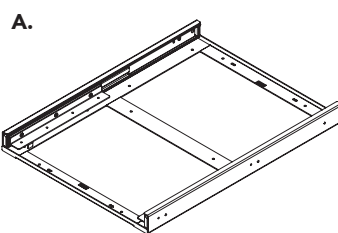

## CHOOSING THE DESIRED BOTTOM SHELF FOR THE UNIT

Unscrew the M4 x 4.5 mm Pan Head Screws from the bottom of the shelf. Choose the desired color by flipping the shelf. Install the bottom shelf back by screwing the M4 x 4.5 mm Pan Head Screws back into the unit (See Figure A).

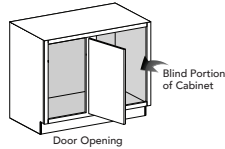

## 5PSP-15 (LEFT HANDED DOOR OPENING)

Fig. A


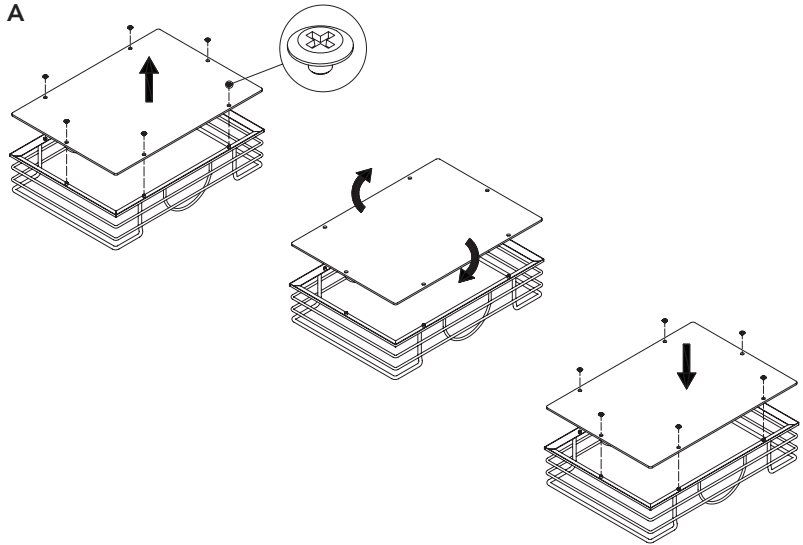


Fig. B

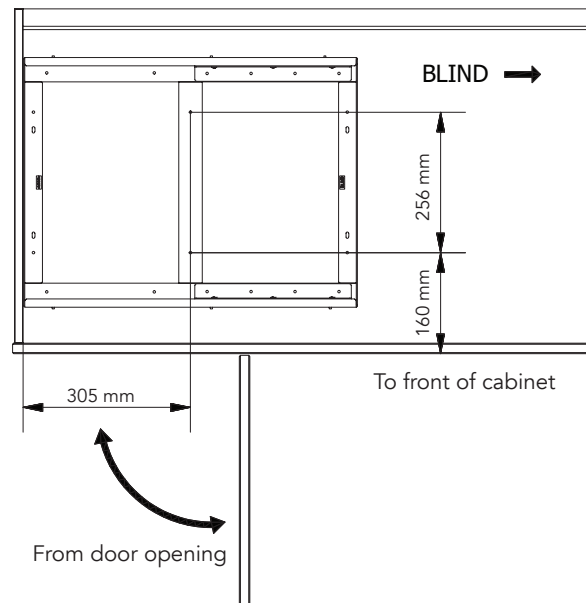

### STEP 1

Mount Base (Fig. B).

### STEP 2

Use (19) of the 4G x 18 mm pan head wood screws to secure the base to the bottom of the cabinet (See Fig C-1).

**Note: Pre-drilling the screws is recommended.**

Install the guide channel on the base of the unit by securing it with (2) of the M5 x 6 mm flat head screws. If the guide channel is installed incorrectly, the unit will not open correctly. (See Fig C-2).

Fig. C-1


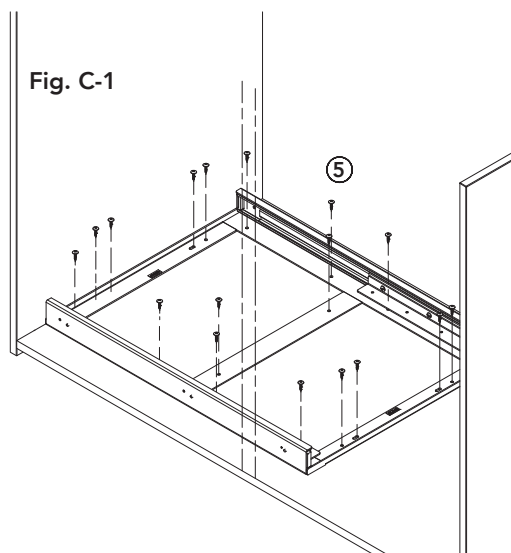



Fig. C-2

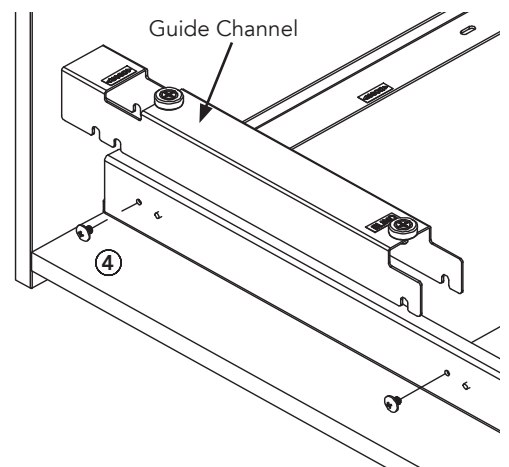

### STEP 3

Install the handles onto the frame using (2) of the M4 x 10 mm Flat head screws (See Figure D).


Fig. D

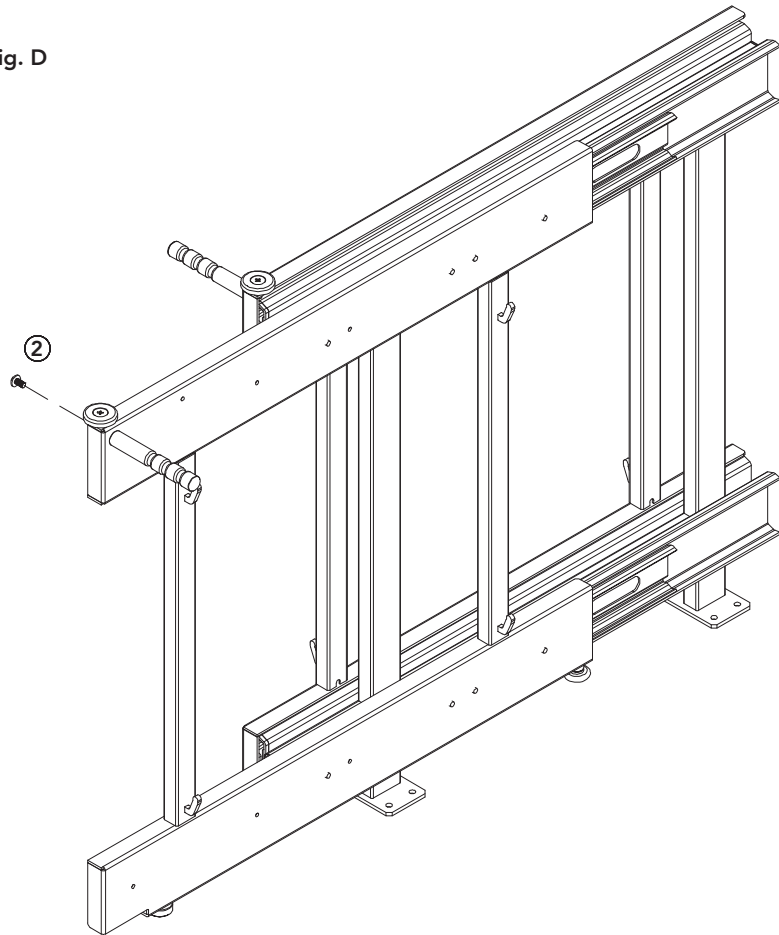

### STEP 4

Attach the two feet to the frame using (8) of the M6 x 10 mm wafer head screws. Each foot will use (4) screws. (See Fig E).

Fig. E

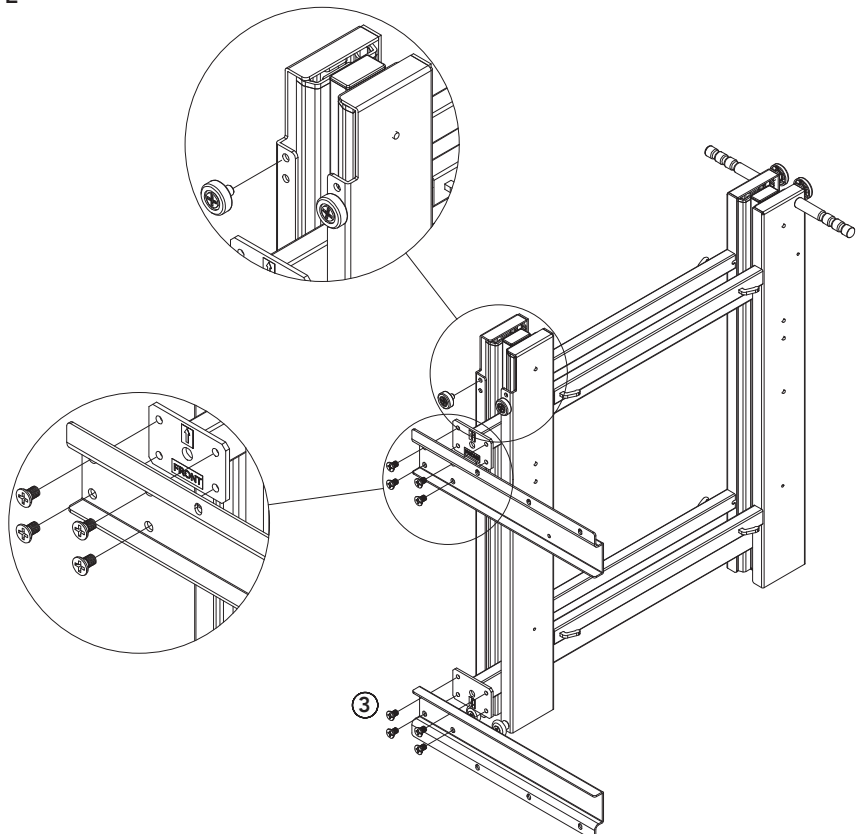

### STEP 5

Secure the assembled frame to the base inside of the cabinet by using (6) of the M5 x 6 mm flat head screws. Make sure to follow the placement on Figure F.

Fig. F



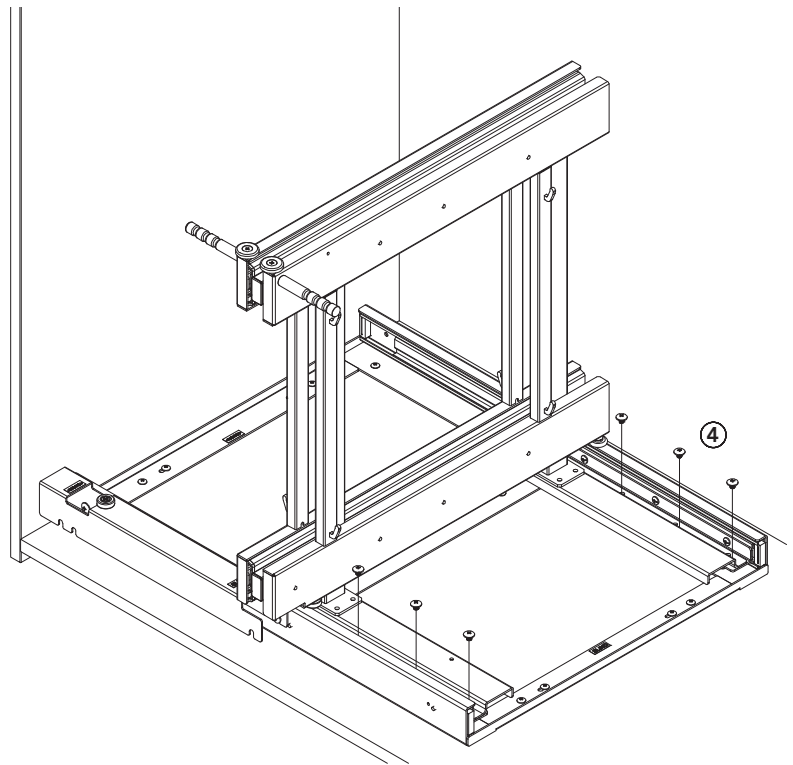


Fig. G

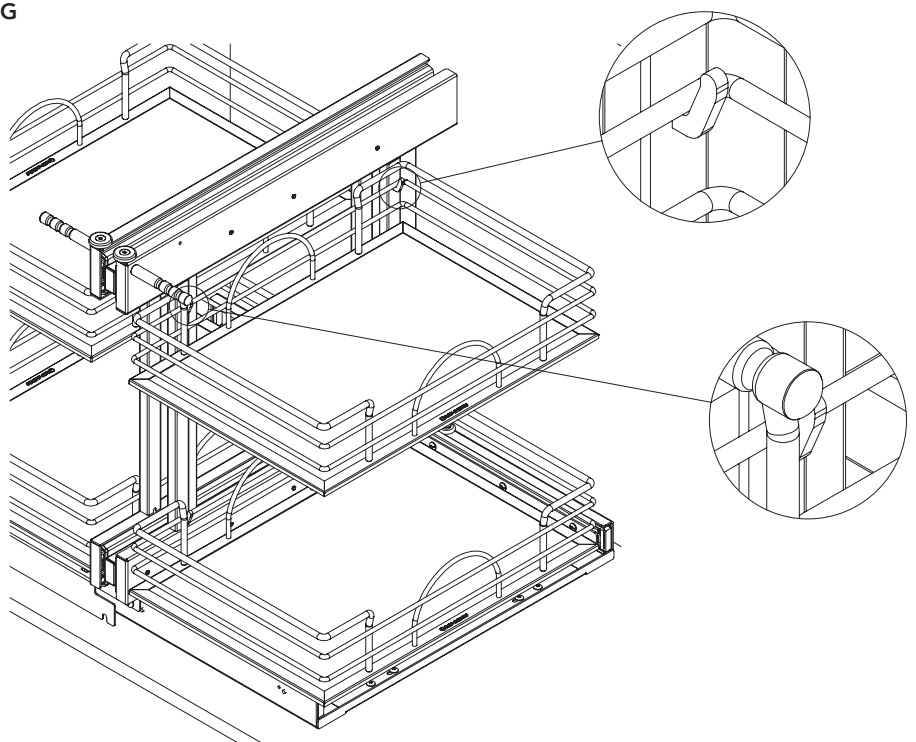

## CHOOSING THE DESIRED BOTTOM SHELF FOR THE UNIT

Unscrew the M4 x 4.5 mm Pan Head Screws from the bottom of the shelf. Choose the desired color by flipping the shelf. Install the bottom shelf back by screwing the M4 x 4.5 mm Pan Head Screws back into the unit (**See Figure A**).

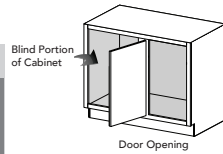

## 5PSP-15 (RIGHT HANDED DOOR OPENING)

Fig. A


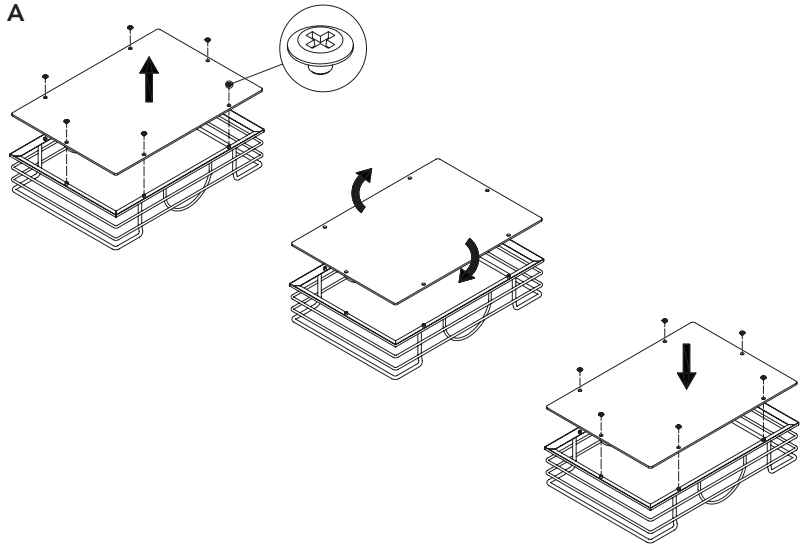


Fig. B

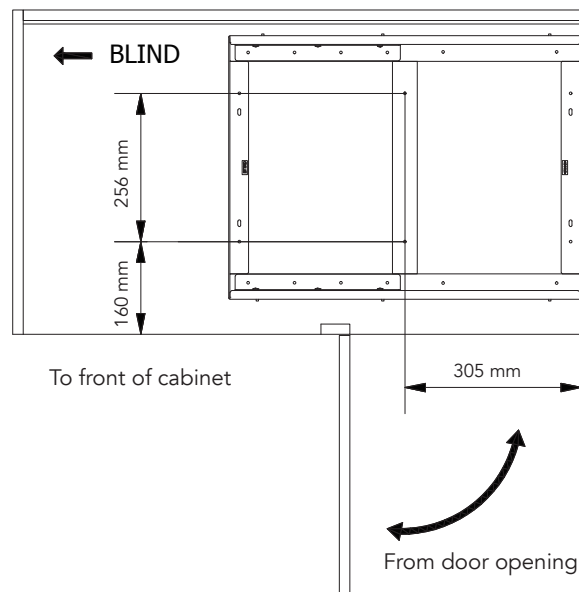

## STEP 2

Use (19) of the 4G x 18 mm pan head wood screws to secure the base to the bottom of the cabinet (**See Fig C-1**).

**Note: Pre-drilling the screws is recommended.**

Install the guide channel on the base of the unit by securing it with (2) of the M5 x 6 mm flat head screws. If the guide channel is installed incorrectly, the unit will not open correctly. (**See Fig C-2**).

Fig. C-1


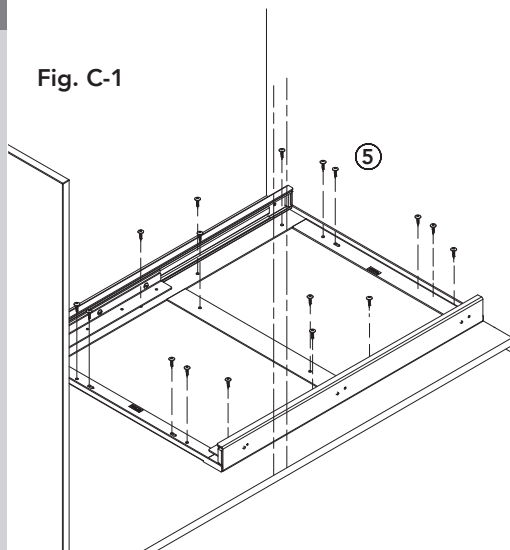



Fig. C-2

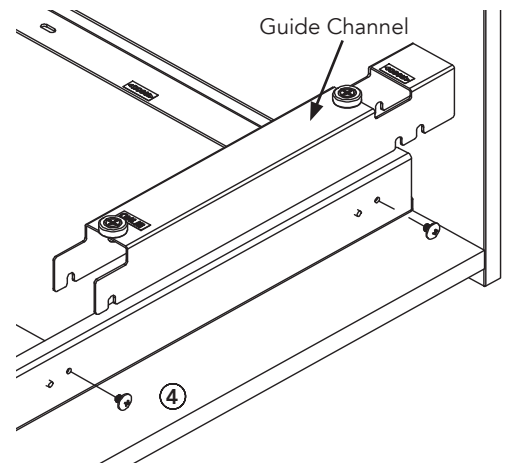

### STEP 3

Install the handles onto the frame using (2) of the M4 x 10 mm Flat head screws (See Figure D).


Fig. D

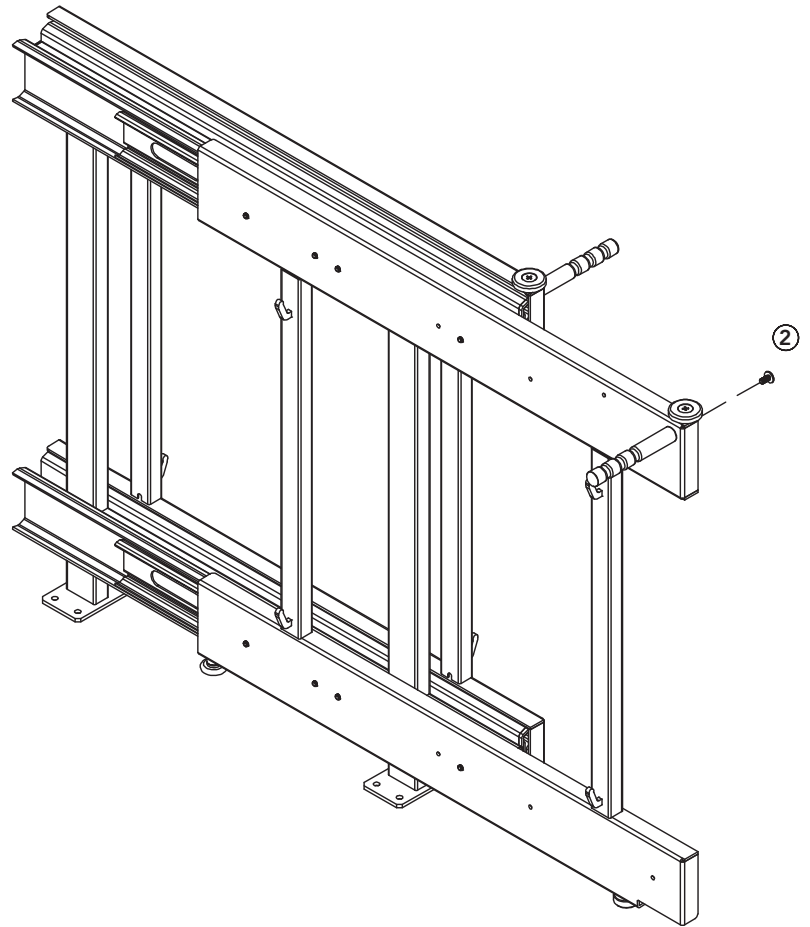

### STEP 4

Attach the two feet to the frame using (8) of the M6 x 10 mm wafer head screws. Each foot will use (4) screws. (See Fig E).

Fig. E

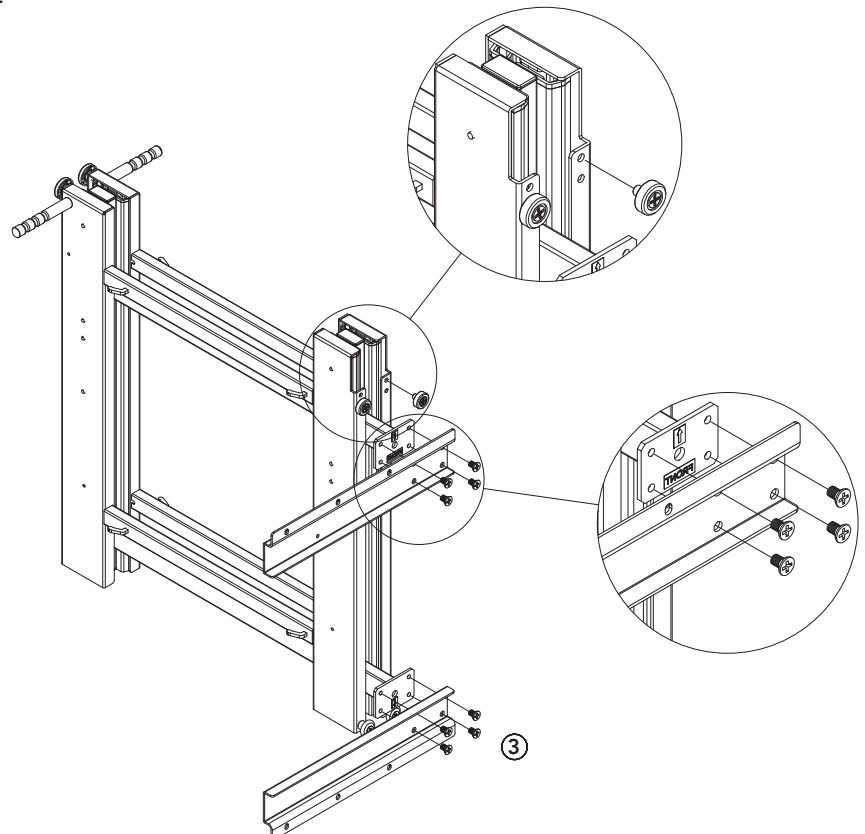

### STEP 5

Secure the assembled frame to the base inside of the cabinet by using (6) of the M5 x 6 mm flat head screws. Make sure to follow the placement on Figure F.

Fig. F


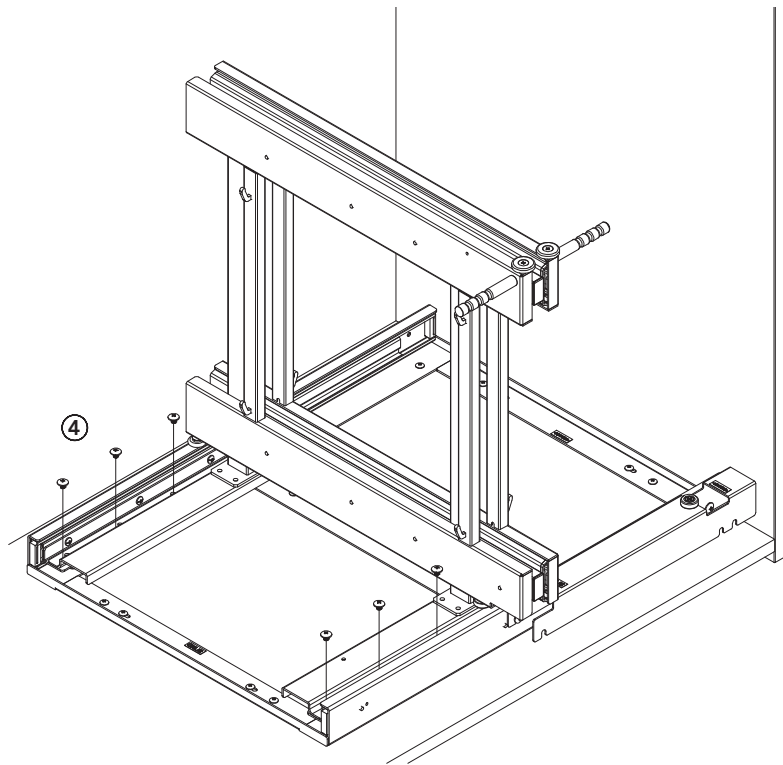


Fig. G



### STEP 6

Attach the (4) baskets onto the unit (See Figure G).

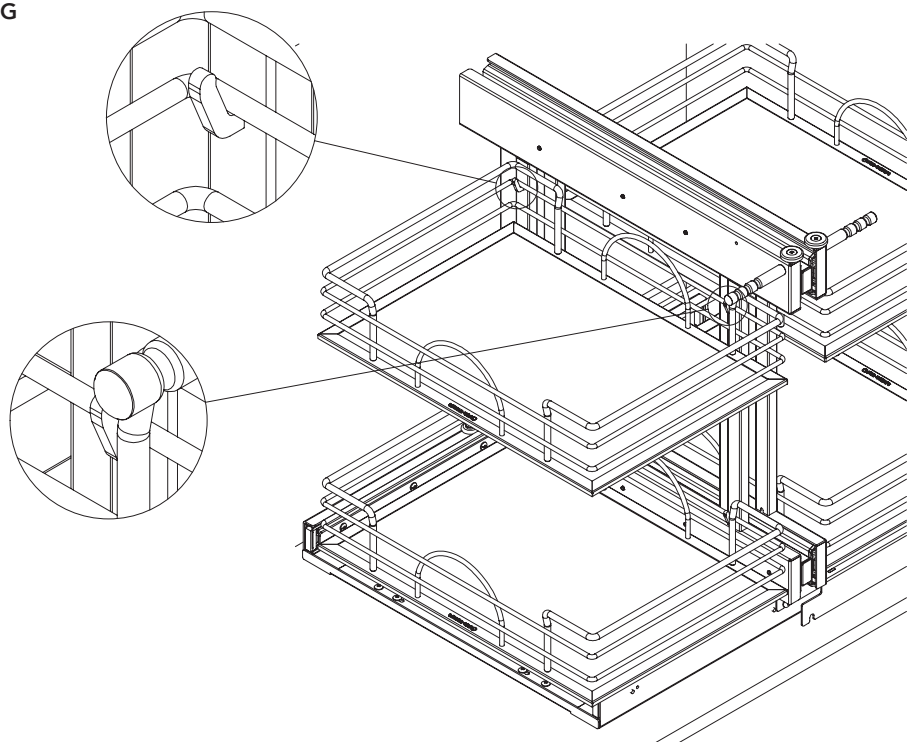



 **REV·A·SHELF®**